


### S1695 Handheld Transmitter

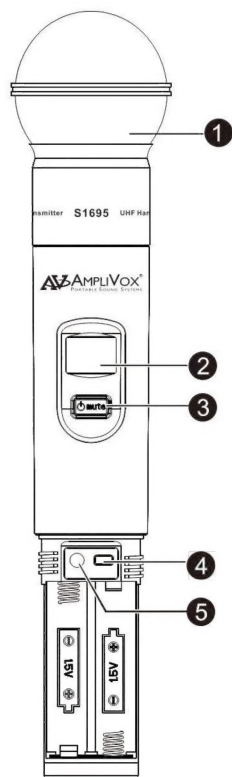

#### Functions:

- ❶ Interchangeable microphone head.
- ❷ LCD screen
- ❸ Power/Mute Control switch  
Middle position is Mute.
- ❹ Select button
- ❺ Microphone input sensitivity adjustment

#### Handheld Transmitter



#### Transmitter Status Display

Push the MUTE/ button 2 second, the display will skip to the group and channel selection. Continuously push two times on the MUTE/ button to turn on MUTE/ function, to turn off the MUTE/ function with the same operation.

#### Manually selecting the group and channel:

Push and hold the button until the group and channel display flashes alternately, push the button to change the channel.

#### Transmitter data lock and unlock: +


Push the mute and select button at the same time to lock and unlock the transmitter data. When locked, channel cannot be changed.

#### Battery displayer:

Display the transmitter battery level.

### Battery Replacement

- The life expectancy of two alkaline batteries is about 10 hours.
- When the power indication symbol on the display screen keeps flashing as shown in the left diagram, the batteries should be replaced immediately, as shown in the above.

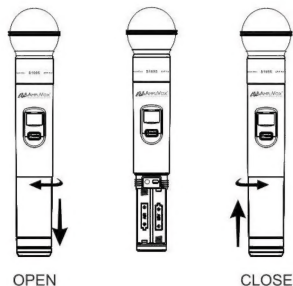

### Specifications

#### S1695 Handheld Transmitter

Audio Input Level maximum

0 dBV

Dimensions (including the microphone)

9 $\frac{5}{8}$ " H x 2" DIA

Weight

8.4 oz

Battery Requirements

2 "AA" alkaline batteries or rechargeable

batteries Battery Life

> 10 hours (Alkaline)